

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

1 is EST

2 is CST

3 is MTN

4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

Press the A button...

below the down arrow... this is the Menu button

Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

1 is EST

2 is CST

3 is MTN

4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SIP SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

1 is EST

2 is CST

3 is MTN

4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

Press the A button...

below the down arrow... this is the Menu button

Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

Press the A button...

below the down arrow... this is the Menu button

Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

Press the A button...

below the down arrow... this is the Menu button

Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

Press the A button...

below the down arrow... this is the Menu button

Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

Press the A button...

below the down arrow... this is the Menu button

Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

1 is EST

2 is CST

3 is MTN

4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #


- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test

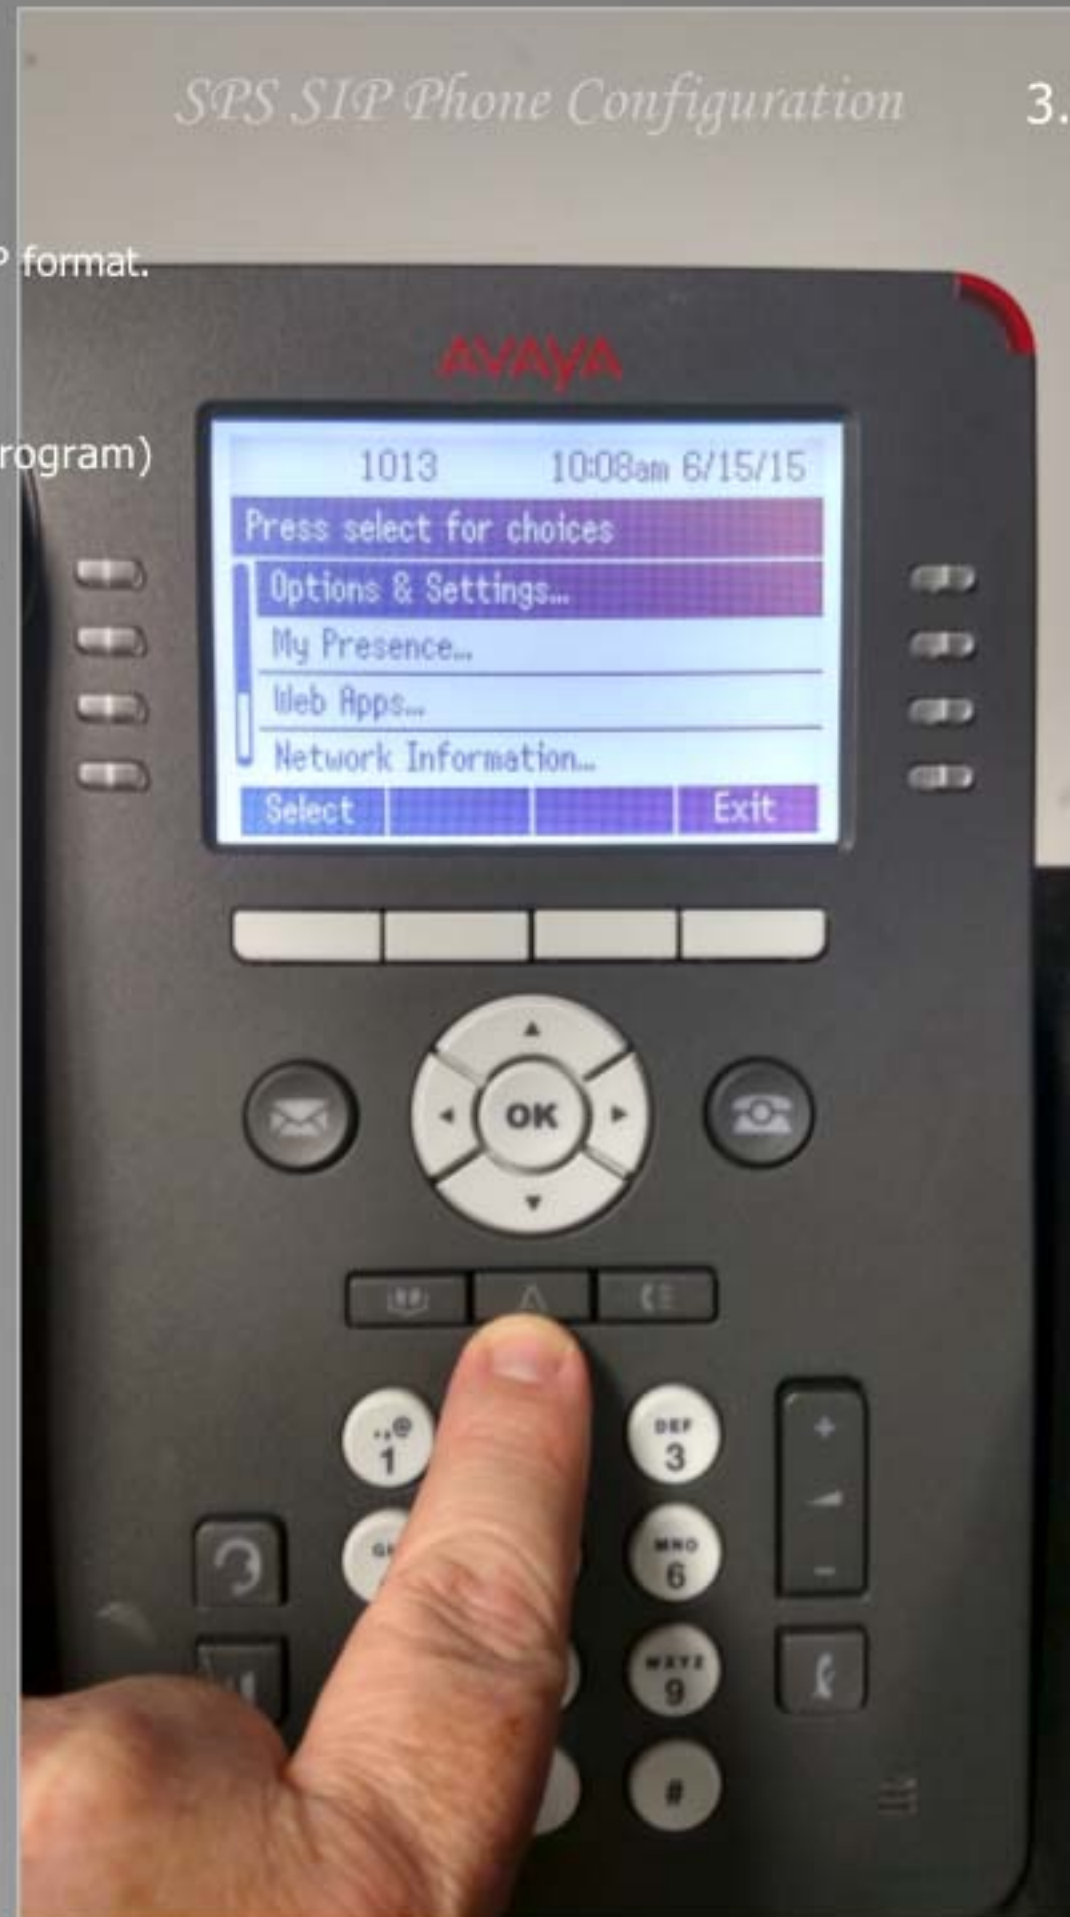

3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC


click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration

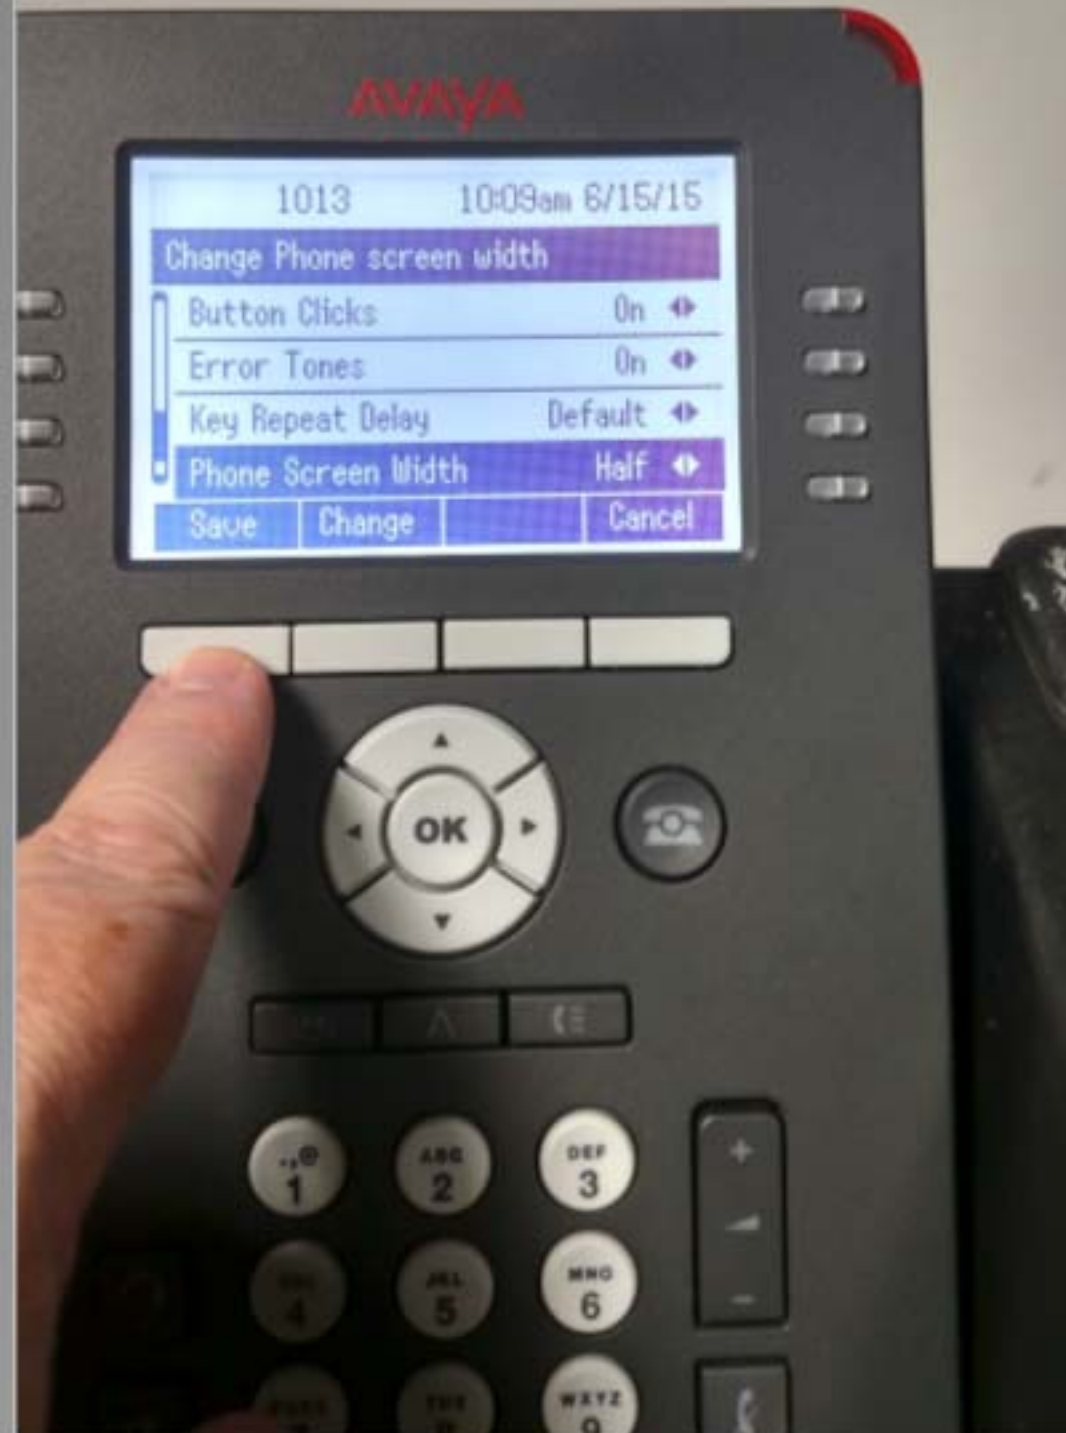

3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC


click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration

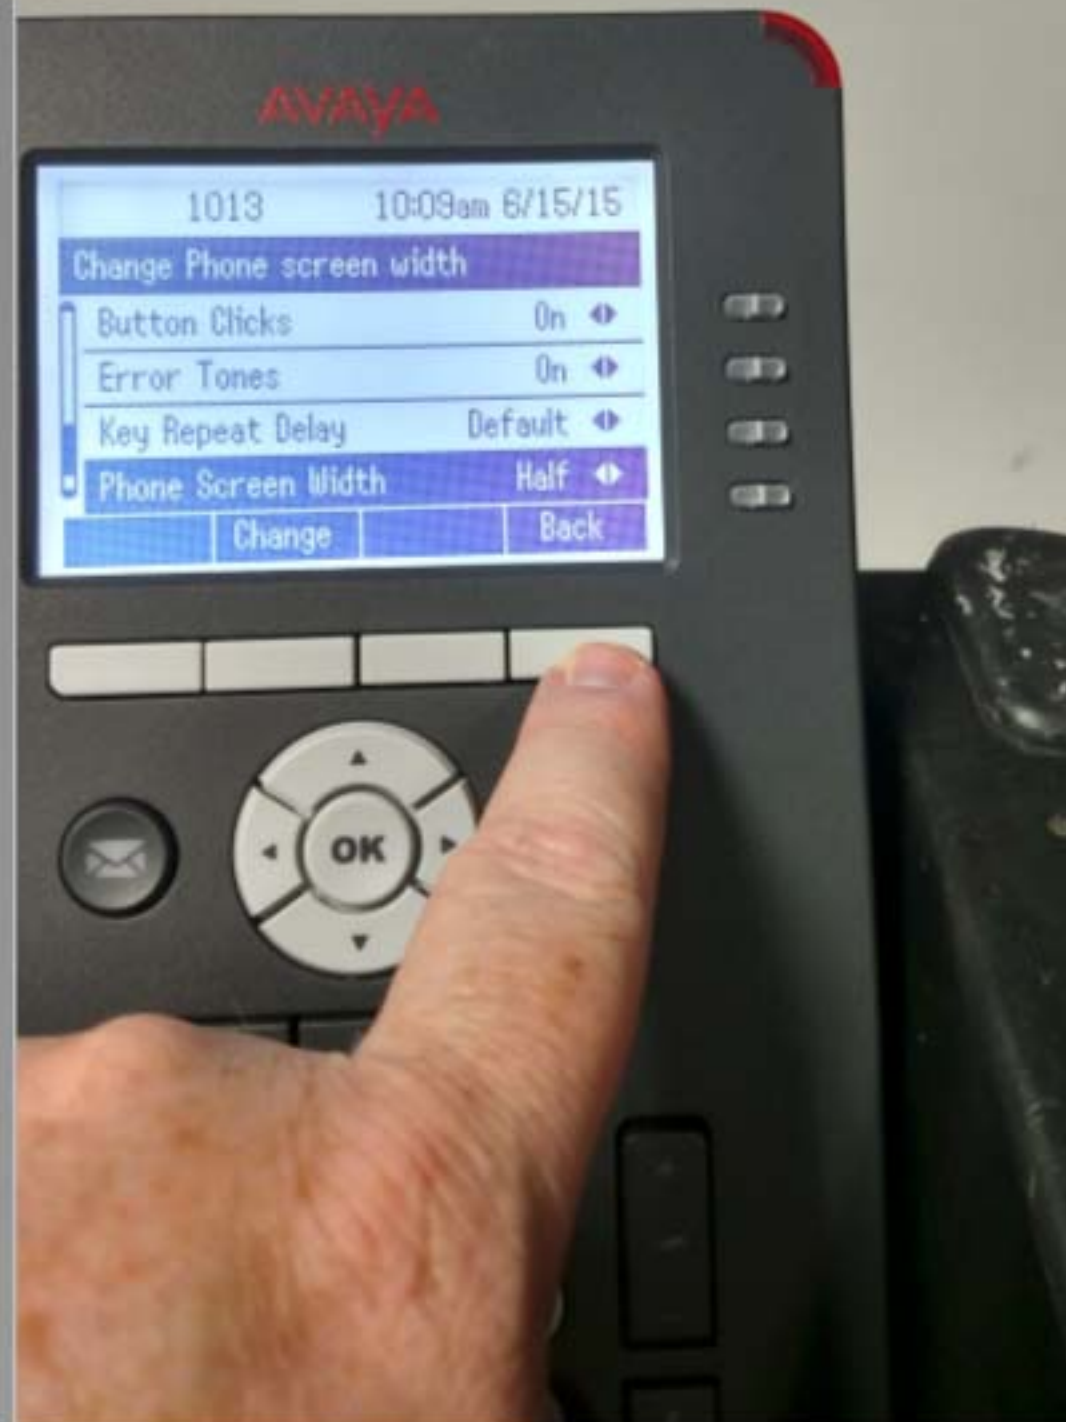

3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC


click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration

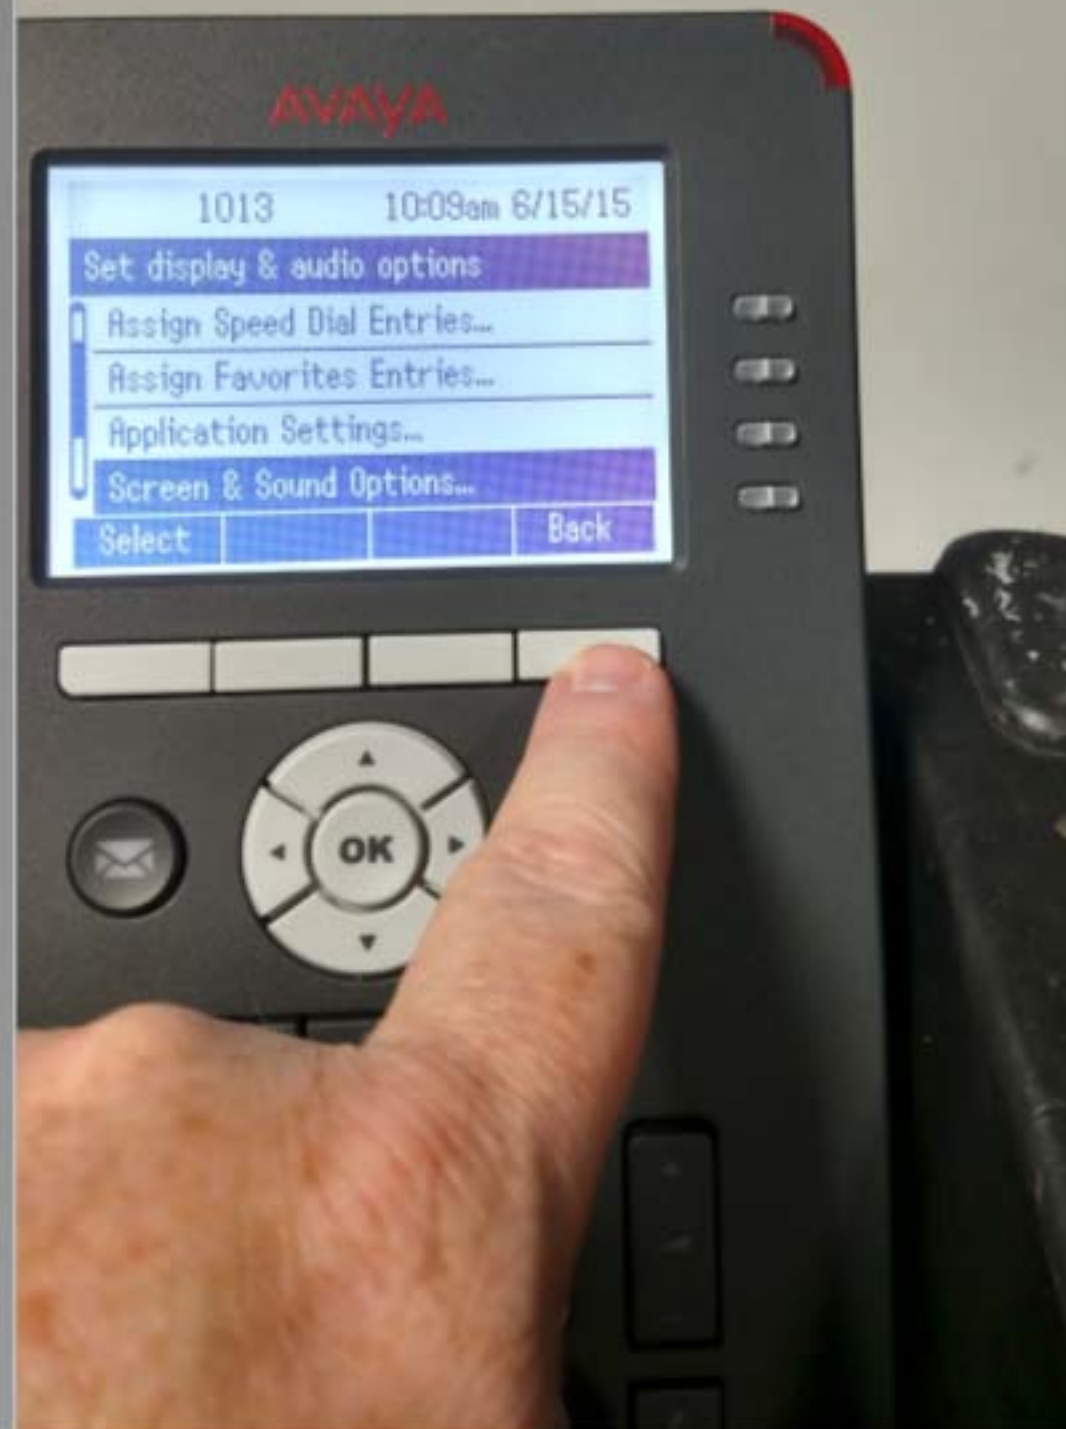

3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC


click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration

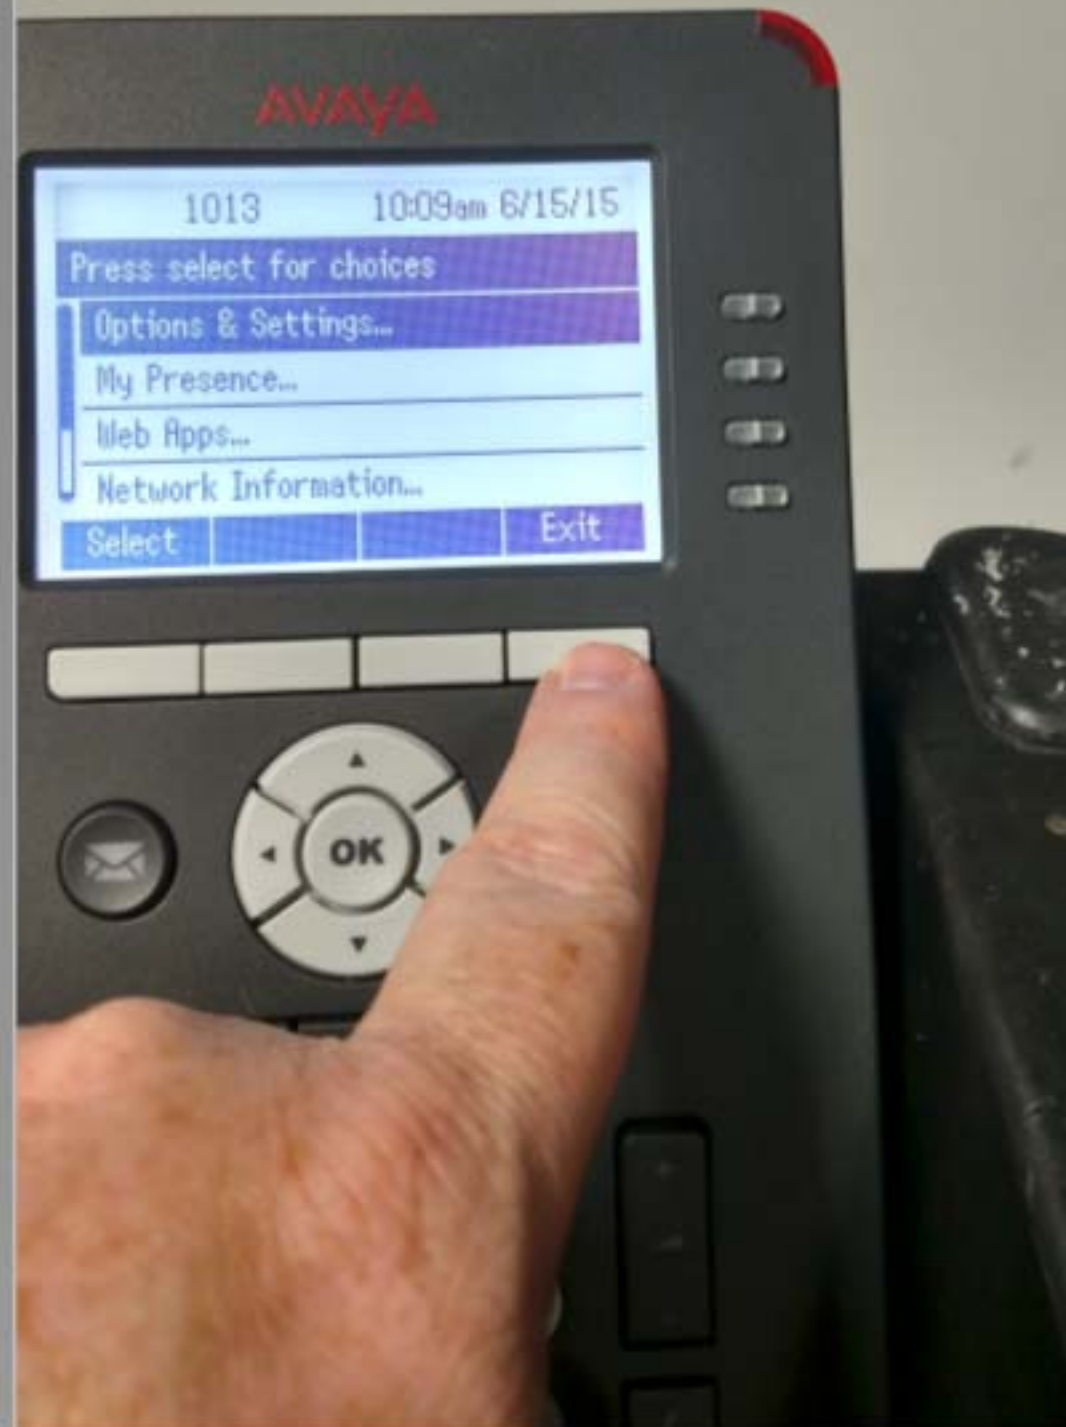

3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.

## Steps to Make SIP Phone Installation

### 1. Phone plugs in to network.

Phone receives info from the utility server  
Phone goes through upgrade steps to make it SIP format.

### 2. When Phone reset's

Press button for Program... (soft key states Program)

Enter Password CRAFT {27238}

Use the down Arrow to the Group setting.

Enter group #

- 1 is EST
- 2 is CST
- 3 is MTN
- 4 is PAC

click save

click exit... phone resets

let phone come up and login

test

## SPS SIP Phone Configuration



3. When Phone is logged in to set up Split Screen every phone must follow these steps.

### Press the A button...

below the down arrow... this is the Menu button

### Complete the following steps

Options / Settings

Screen & Sound

Phone Screen Width

Toggle the screen width from FULL to HALF using line button next to menu item  
click on Save button

click either return or the Phone symbol

Phone ready for use.